

Information Firmware Update Leica SL (Typ 601)

Firmware 2.2

Dear Customers,

installing the new firmware on your Leica SL (Typ 601) will provide additional functions and performance to your camera. The update enables you to use additional software to enhance the workflow with computers.

Update Contents

Model Number	LEICA SL (Typ 601)	
Update Version	2.2	
Update Filename	601_22.lfu	

Overview

Version	Description
Version 2.2	New Top Features:
	Added support for Leica Image Shuttle 3.5 (Windows)
	• Improved support for Leica Image Shuttle 3.5 (MAC) and for Adobe [®] Photoshop [®] Lightroom [®]
	Tethered Plug-In 1.1.0 (MAC)
	Changed exp. limitation in combination with 6bit coded M-lenses
	Bug Fixes:
	Fixed, missing data in EXIF in combination with lens adapters
	Several minor bug fixes

INSTALLATION LEICA SL (Typ 601) Firmware

Please follow these steps to install the new firmware for your Leica SL camera:

This instructions describes the processe if you have previously installed at least Firmware 2.0

Preparation

- 1. Recharge the battery to 100% and insert the battery into the camera.
- 2. Remove every SD card from the camera.
- 3. Download the new firmware file to your computer.
- 4. Prepare the SD card for installation:
 - a. Please make sure that the card contains at least 200 MB of free disk space.
 - b. It is recommended to format the card inside the camera before continuing
 - c. Download the new firmware file to your computer.
 - d. Copy the firmware file to the root directory of the SD card.
 - e. Eject the SD card properly from your computer.

Installation

- 5. Insert the SD card into slot 1 of the camera and switch on the camera.
- 6. Go to MENU / SETUP / Camera Information / Firmware
- 7. Press "Start Update" and confirm to start the process;
 - a. The camera will guide you through the backup process of your current settings.
 - b. Please confirm to save your current settings to SD card before proceeding with the update.
 - c. Wait until the update installation is completed.
 - d. Restart the camera, do not eject the SD card.
 - e. Please confirm to load your last settings from SD card during the first startup.
- 8. The update process is completed.

CAUTION:

Please do <u>not</u> turn off your camera, or do <u>not</u> remove the SD Memory Card, do <u>not</u> remove the lens while updating your camera's firmware.

DISREGARDING THIS ADVICE CAN CAUSE SERIOUS DAMAGE TO YOUR CAMERA!