



# Installation instructions for the Leica M10

## Firmware 1.3.4.0

Dear Customers,

Installing the firmware 1.3.4.0 on your Leica M10 will add additional functions and improve performance to your camera.

### Update Contents

Model Number	LEICA M10
Update Version	1.3.4.0
Update Filename	M10-1.3.4.0-SYSTEM.FW

### Overview

Version	Description
---------	-------------

Version 1.3.4.0 – **The color-coding of the SD-Card and battery status bars has been changed.**

The color of the status bar now changes from green to yellow to red as the battery is depleted or the SD card is filled.

– **Two favorites pages allowed**

It is now possible to choose up to 15 menu items for the favorites menu. If more than 7 are chosen, a second favorites page will be automatically added.

– **Quick access to the main menu and page-by-page scrolling using the menu button**

Pushing the menu button while in the last page of favorites will open the first page of the main menu. It is possible to scroll through the main menu page-by-page using the menu button.

– **Auto Review Screen Target selectable**

In the menu item EVF/display control it is now possible to choose from “Auto”, “EVF” or “Display” to

determine which screen the Auto Review function uses by default.

– **“M-ISO” can be accessed directly from the favorites menu**

In “Edit Favorites” it is possible to enable a shortcut to “M-ISO” for the favorites menu

– **Shorter blackout time after capturing in Live view**

The time when the Live View stream is interrupted after a picture is taken is significantly shorter now. This is most noticeable when Auto Review is turned off.

**Additional bug fixes and minor improvements also included.**

**Please follow these steps to install the new firmware for your Leica M camera:**

Recharge the battery to 100% and insert the battery into the camera.

1. Download the new firmware file to your computer.
2. Prepare the SD card for installation:
  - a. Please make sure that the card contains at least 200 MB of free disk space.
  - b. It is recommended to format the card inside the camera before continuing
  - c. Download the new firmware file to your computer.
  - d. Copy the firmware file to the root directory of the SD card.
  - e. Eject the SD card properly from your computer.
3. Insert the SD card into the camera and switch the camera on.
4. Go to Main Menu / Camera Information / Camera Firmware
5. Press “Yes” to confirm and start the process;
  - a. Please confirm to save your current profiles to SD card before proceeding with the update.
  - b. Wait until the update installation is completed.
  - c. Restart the camera, do not eject the SD card.
  - d. Please load your last profiles from SD card after the first startup.
6. The update process is complete.

**CAUTION:**

Please do **NOT** turn off your camera or remove the Battery or SD Memory Card while the update is running.

**DISREGARDING THIS ADVICE CAN CAUSE SERIOUS DAMAGE TO YOUR CAMERA!**